


Channel Master

Simple Remote

Alternative Remote Control for Apple TV (Generation 4)
& Channel Master DVR's

CM-7000XRC

Using the Simple Remote

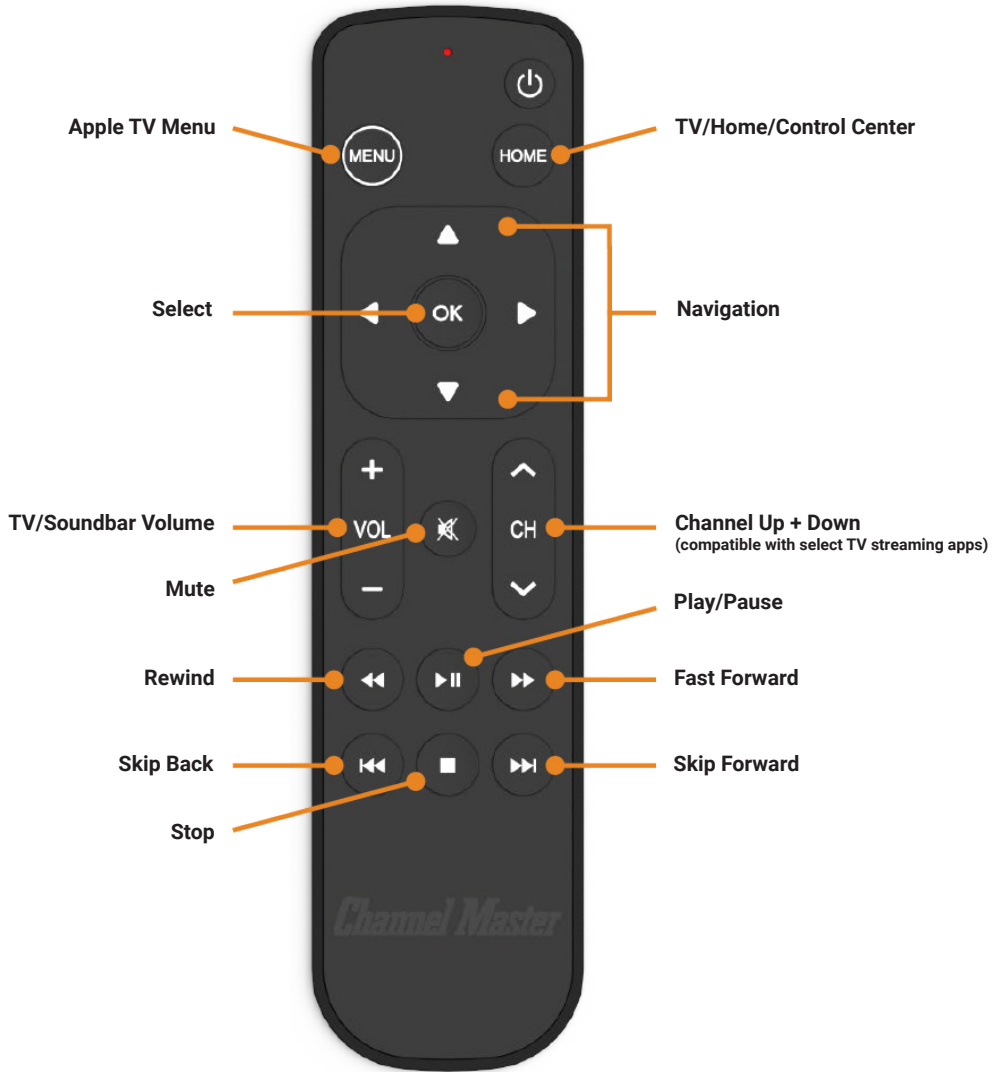

Simple Remote Overview

The Channel Master Simple Remote was designed to specifically work with 4th generation Apple TV units and to provide a more conventional remote control user experience. The Simple Remote is pre-programmed to work with Apple TV units out of the box or it can also be programmed to work as a replacement remote control for Channel Master DVR's.

Important Details:

- Simple Remote uses IR commands which means line of sight between the Apple TV and Simple Remote control is required.
- Simple Remote DOES NOT support Bluetooth functions including voice search.
- The Simple Remote comes from the factory with a plastic Isolator in the battery compartment to preserve battery life before initial use. You will need to ensure the plastic isolator is removed prior to first use.
- The Simple Remote has universal functionality which allows it to be programmed to control the on/off and volume functionally of most brands of TV's and soundbars. (Note: Simple Remote will not control other TV functions besides Power On/Off and Volume +/-)

Programming Simple Remote to TV's and Soundbars

Programming Remote to Control Your TV

- Step 1:** Turn ON your TV and Soundbar using your original remote controls.
- Step 2:** On the Simple Remote press the Menu and OK Buttons simultaneously for 3 seconds until the red LED remains on.
- Step 3:** On the Simple Remote Press the CH ▲ button and watch for your TV's on-screen volume indicator to appear.
- Step 4:** Wait 2 seconds and if you do not see your TV's volume indicator appear on your TV screen, repeat step 3 until it appears.
- Step 5:** Immediately after your TV volume indicator appears on the screen, Press Ok to save code. The red light will blink three times to confirm the code was saved.
- Step 6:** Try the VOL+ and VOL- buttons on the Simple Remote and it should now control your TV's volume. Now it should also power on and off your television if you press the power button on the top right corner of the remote.

If your Simple Remote will not control your TV's Volume and Power functions, please try steps 2 through 6 again. If you continue to have issues please visit www.channelmaster.com/support for additional troubleshooting steps.

Programming Remote to Control Your Soundbar

- Step 1:** Turn ON your TV and Soundbar using your original remote controls.
- Step 2:** On the Simple Remote press the Menu and OK Buttons simultaneously for three seconds until the red LED remains on.
- Step 3:** On the Simple Remote press the ▼ (Down Arrow) button and watch for your TV's on-screen volume indicator to appear. Wait 2 seconds and if you do not see your soundbars volume indicator appear on your TV screen or soundbar, repeat step three until it appears. (If your soundbar does not have a volume indicator you will want to listen for the volume to change instead of looking for the indicator) Immediately after your soundbars volume indicator appears or you hear a change in volume, press OK to save code. The red light will blink three times to confirm the code was saved.
- Step 4:** Try the VOL+ and VOL- buttons on the Simple Remote and it should now control your soundbars volume. Now it should also power on and off your soundbar if you press the power button on the top right corner of the remote.
- Step 5:** Try the VOL+ and VOL- buttons on the Simple Remote and it should now control your soundbars volume. Now it should also power on and off your soundbar if you press the power button on the top right corner of the remote.
- Step 6:** Try the VOL+ and VOL- buttons on the Simple Remote and it should now control your soundbars volume. Now it should also power on and off your soundbar if you press the power button on the top right corner of the remote.

If your Simple Remote will not control your TV's Volume and Power functions, please try steps 2 through 6 again. If you continue to have issues please visit www.channelmaster.com/support for additional troubleshooting steps.

Programming Remote to Control Channel Master DVR's:

Stream+ : Press Menu Button and **▶||** (Play/Pause) Button simultaneously for 3 seconds. Remote should now be set to control Stream+ functions.

DVR+ : Press Menu and **▶▶** (Fast Forward) buttons simultaneously for 3 seconds. Remote should now be set to control DVR+ functions.

Factory Reset: Press Menu and **■** (Stop) buttons simultaneously for 3 seconds. Remote should now be reset to factory defaults.

For Product Warranty information please visit us online at www.channelmaster.com/warranty

Troubleshooting Tips:

Issue:

Simple Remote programming instructions are not working for TV, sound bar or Channel Master DVR.

Resolution:

It is very easy to skip over the correct code if you are pressing the button too fast, try slowing down while pressing the button and see if this helps. Please also note that it may take up to 100 button presses before you find the correct code for your TV, please be patient during this process.

Issue:

Simple Remote programming instructions are not working for Channel Master DVR.

Resolution:

Remote control needs to be programmed to control the specific DVR model. Find your DVR model and follow these instructions for the appropriate model.

Stream+ : Press Menu Button and **▶||** (Play/Pause) Button simultaneously for 3 seconds. Remote should now be set to control Stream+ functions.

DVR+ : Press Menu and **▶▶** (Fast Forward) buttons simultaneously for 3 seconds. Remote should now be set to control DVR+ functions.

Issue:

How to factory reset the Simple Remote to factory defaults?

Resolution:

Factory Reset: Press Menu and **■** (Stop) buttons simultaneously for 3 seconds. Remote should now be reset to factory defaults.

Issue:

Simple Remote will not work with AppleTV

Resolution:

Factory reset the Apple TV. Unplugging the Apple TV and plugging back in will sometimes work, but in most cases it requires a full factory reset to restore the AppleTV capability.

Video Overview:

Scan the QR code to watch the Simple Remote video overview.

